


datavideo

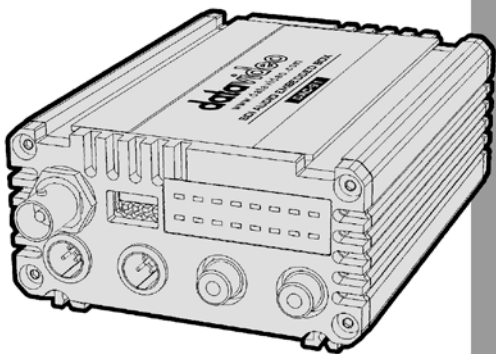

SDI AUDIO EMBEDDER DAC-91 Quick Start Guide

www.datavideo.com

Table of Contents

Warnings and Precautions	2
Disposal	3
Warranty	4
Standard Warranty	4
Two Year Warranty	4
Packing List.....	5
Introduction	5
Features	5
Connections & Controls	6
Front Panel.....	6
Rear Panel	7
Firmware Update	8
Firmware 1 Update Procedure (Client)	8
Firmware 2 Update Procedure (Client)	10
Frequently-Asked Questions.....	12
Specifications.....	13
Dimensions.....	14
Service & Support.....	15

Disclaimer of Product and Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.



Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.

12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked “Do Not Remove” may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

Disposal



For EU Customers only - WEEE Marking

This symbol on the product indicates that it should not be treated as household waste. It must be handed over to the applicable take-back scheme for the recycling of Waste Electrical and Electronic Equipment. For more detailed information about the recycling of this product, please contact your local Datavideo office.

Warranty

Standard Warranty

- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered by this warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- Cables & batteries are not covered under warranty.
- Warranty only valid within the country or region of purchase.
- Your statutory rights are not affected.

Two Year Warranty

All Datavideo products purchased after 01-Oct.-2008 qualify for a free one year extension to the standard Warranty, providing the product is registered with Datavideo within 30 days of purchase. For information on how to register please visit www.datavideo.com or contact your local Datavideo office or authorized Distributors

Certain parts with limited lifetime expectancy such as LCD Panels, DVD Drives and Hard Drives are only covered for the first 10,000 hours, or 1 year (whichever comes first).

Any second year warranty claims must be made to your local Datavideo office or one of its authorized Distributors before the extended warranty expires.

Packing List

Items	Description	Q'ty
1	DAC-91 Unit	1
2	Accessory List	1

Introduction

DAC-91 is an SDI Audio Embedder that allows the user to embed 2 channels of mixed analog audio signals into the SDI video signal.

It features 3G/HD/SD-SDI to support up to 1080p/60 video format, and automatically detects and switches between different formats. In addition, mini XLR and RCA audio connectors are provided as inputs for analog audio with left mini XLR and RCA mixed to CH1 and right mini XLR and RCA mixed to CH2.


The Audio Box also allows the user to adjust audio gains using the built-in DIP switches.

Features

- Audio embedding into SDI Signal
- Single or dual audio channel mixing
- Automatic detection of 3G, HD, and SD signals
- 4 analog audio inputs (Mini XLR x 2 / RCA x 2)
- Audio level indicator display
- SMPTE/EBU audio levels
- 5 audio gains
- Control via DIP Switches

Connections & Controls

Front Panel

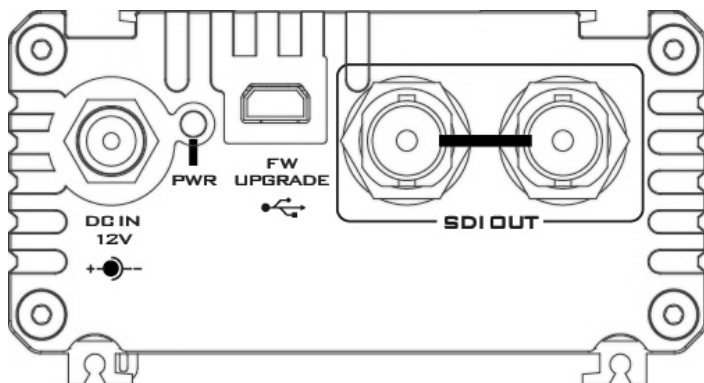

DC IN
12V
+ -

DC In Socket

Connects the supplied 12V PSU to this socket. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.



PWR

Power Indicator

Indicates the power status



SDI OUT

Video and Audio output from SDI




FW
UPGRADE



USB

Firmware Upgrade

Rear Panel

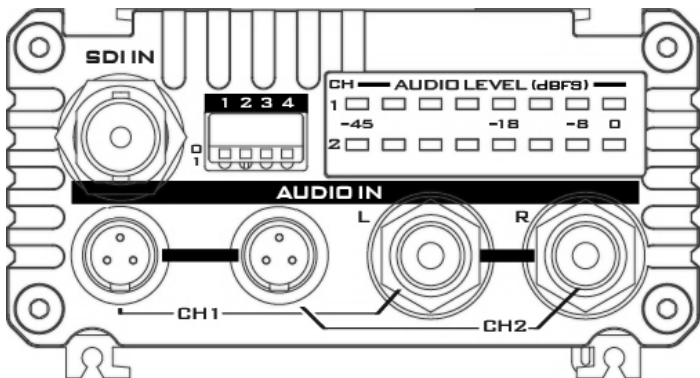

SDI IN



SDI IN

SDI input for video and audio




Mini-XLR

Balanced XLR audio input channel x 2



RCA

Unbalanced RCA audio input channel x 2

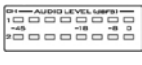

Audio Level Indicator

LED color and the corresponding audio level

Green				Yellow	Red		
-45~-40	-39~-35	-34~-29	-28~-24	-23~-18	-17~-13	-12~-8	-7~0

(Unit : dBFS)



4 PIN DIP Switch

Audio level adjustment


4 PIN DIP SWITCH CONFIGURATION

DIP SW 1		DIP SW 2-4					
Audio Level		Audio Gain Setting & Firmware Upgrade					
0	SMPTE EBU	000	0dB	011	+12dB	110	Firmware Upgrade 1
1		001	+6dB	100	-12dB	111	Firmware Upgrade 2
		010	-6dB				

Firmware Update

Firmware 1 Update Procedure (Client)


1. Disconnect DC 12V Power Supply from DAC-91
2. Set DIP SW2-4 to 110 (1: down; 0: up)

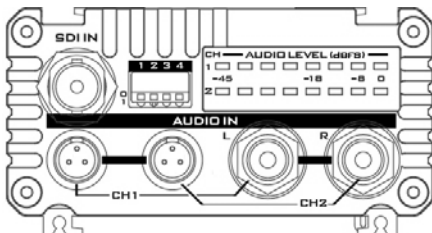

3. Connect the DAC-91 mini-USB port to the PC via a USB cable
4. Reconnect DC 12V Power Supply to DAC-91
5. The PC will detect the USB device once the DC 12V Power is connected.
6. Copy and paste the Firmware-1 file (DAC-91-FW1-v1.XX.bin) to the device




7. Make sure the device is safely removed

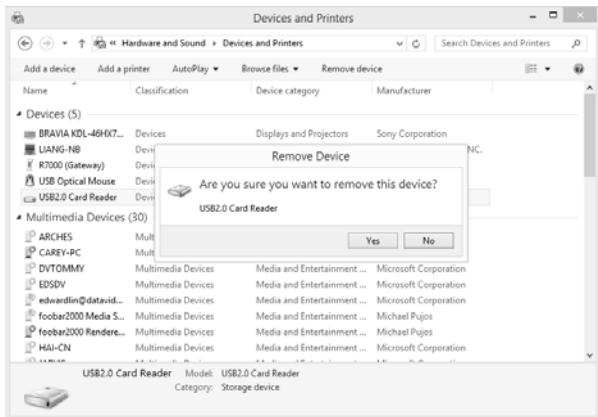

8. Set DIP SW 2-4 to a combination other than 110 or 111, for example 000 (1: down; 0: up)
9. To complete the update, remove the USB cable connection and disconnect the DC 12V Power Supply

Firmware 2 Update Procedure (Client)


1. Disconnect DC 12V Power Supply from DAC-91
2. Set DIP SW2-4 to 111 (1: down; 0: up)

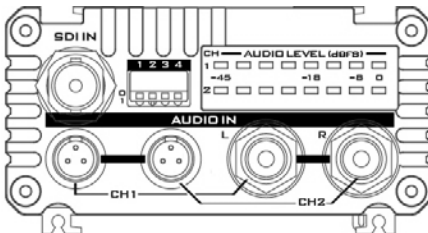

3. Connect the DAC-91 mini-USB port to the PC via a USB cable
4. Reconnect DC 12V Power Supply to DAC-91
5. The PC will detect the USB device once the DC 12V Power is connected.
6. Copy and paste the Firmware-2 file (DAC-91-FW2-v1.XX.bin) to the device



7. Start updating the FPGA and this process takes approximately 2 minutes
8. Safely remove the device after the file is copied successfully

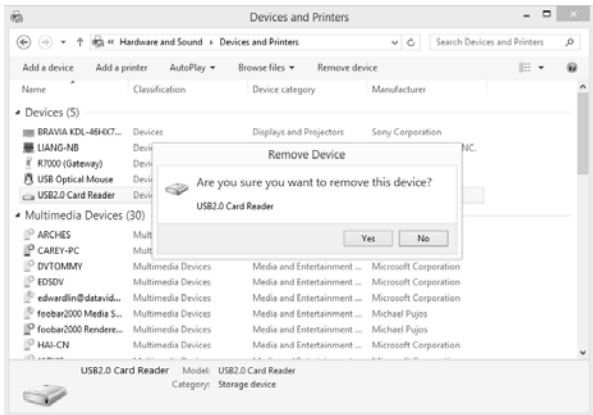

9. Set DIP SW 2-4 to a combination other than 110 or 111, for example 000 (1: down; 0: up)
10. To complete the update, remove the USB cable connection and disconnect the DC 12V Power Supply

Frequently-Asked Questions




This section describes problems that you may encounter while using DAC-91. If you have questions, please refer to related sections and follow all the suggested solutions. If problem still exists, please contact your distributor or the service center.

No.	Problems	Solutions
1.	No audio is heard and audio level indicator is off when SDI-IN signal is absent.	SDI Input must be connected to yield Embedded Audio Out at Mini-XLR and RCA ports. This is because SDI audio embedding can only be done in the presence of SDI-IN signal.
2.	How long does it take for the DAC-91 to finish booting?	After the DAC-91 power is turned on, the power LED will also be turned on. The user is allowed to operate DAC-91 after the device boot-up process is completed. The device boot-up process completion is indicated by turning on all audio indicator LEDs at the same time and then gradually fading out.

Specifications

Interface	
SDI Video Input	3G/HD/SD SDI x 1
SDI Video Output	3G/HD/SD SDI x 2
Analog Audio Input	Mini XLR (balanced) x 2, RCA (unbalanced) x 2 * Mini XLR1 & RCA1 mixed to CH1 * Mini XLR2 & RCA2 mixed to CH2
Indicator	Power LED x 1 Audio LED : 2 rows
Updates and Configuration	Mini USB x 1
Standards	
SDI Format Support	SD: NTSC 525/29.97 and PAL 625/25 HD: 1080p 50/59.94/25/29.97 1080i 50/59.94 720p 50/59.94
SDI Compliance	SMPTE 259M, SMPTE 292M, SMPTE 296M, SMPTE 424M, SMPTE 425M-AB ITU-R BT.656
SDI Video Rates	SDI video connections are switchable between standard definition and high definition.
SDI Video Sampling	4:2:2
SDI Audio Sampling	24-bit (SD 20-bit), 48Khz
SDI Color Precision	4:2:2 (10-bit)
SDI Color Space	YUV
SDI Auto Switching	Automatically detects SD, HD, 3G
Audio Level	SMPTE/EBU
Audio Gain	0dB, +/-6dB, +/-12dB
General	
Settings Control	Dip Switch
Power Supply	DC 12V
Operating Temperature	0°C to 50°C (32°F to 122°F)
Operating Humidity	10% to 90% (non condensing)
Certification	CE, FCC
Accessory	Power Adapter, QSG

Dimensions

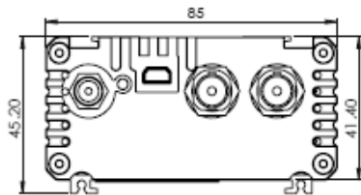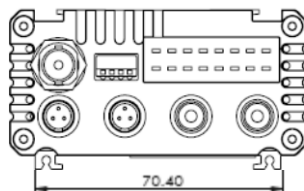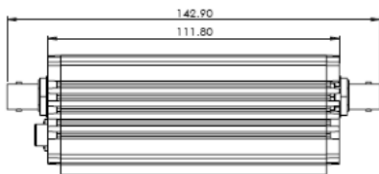

Service & Support

It is our goal to make your products ownership a satisfying experience. Our supporting staff is available to assist you in setting up and operating your system. Please refer to our web site www.datavideo.com for answers to common questions, support requests or contact your local office below.

Datavideo Taiwan

Datavideo Technologies Co., Ltd
10F, No. 176, Jian 1st Rd., Chung Ho
District, New Taipei City 235, Taiwan,
R.O.C.

Tel: +886-2-8227-2888

Fax: +886-2-8227-2777

E-mail: service@datavideo.com.tw

Datavideo Europe

Datavideo Technologies Europe BV
Floridadreef 106
3565 AM Utrecht,
The Netherlands

Tel: +31-30-261-96-56

Fax: +31-30-261-96-57

E-mail: info@datavideo.nl

Datavideo United Kingdom

Datavideo UK Limited
Units 1 & 2 Waterside Business Park
Hadfield, Glossop, Derbyshire
SK13 1BE, UK

Tel: +44-1457 851 000

Fax: +44-1457 850 964

E-mail: sales@datavideo.co.uk

Datavideo USA

Datavideo Corporation
7048 Elmer Avenue
Whittier, CA 90602,
U.S.A.

Tel: +1-562-696 2324

Fax: +1-562-696 6930

E-mail: sales@datavideo.us

Datavideo China

Datavideo Technologies China Co
101, NO. 618, LiuYing Rd, Zhabei District,
Shanghai, China

Tel: +86 21-5603 6599

Fax: +86 21-5603 6770

E-mail: service@datavideo.cn

Datavideo Singapore

Datavideo Technologies (S) PTE Ltd
No. 178 Paya Lebar Road #06-03
Singapore 409030

Tel: +65-6749 6866

Fax: +65-6749 3266

E-mail: sales@datavideo.sg

Datavideo Hong Kong

Datavideo Hong Kong Ltd
G/F, 26 Cross Lane
Wanchai, Hong Kong

Tel: +852-2833-1981

Fax: +852-2833-9916

E-mail: info@datavideo.com.hk

Datavideo France

Datavideo France s.a.r.l
Cité Descartes 1, rue Albert Einstein
Champs sur Marne
774477-Marne la Vallée cedex 2

Tel: +33-1-60370246

E-mail: info@datavideo.fr

Datavideo India

Datavideo Technologies India Pvt L
A-132, Sec-63, Noida-201307,
Uttar Pradesh (UP), India.

Tel: +91-0120-2427337

Fax: +91-0120-2427338

E-mail: sales@datavideo.in



Please refer to our website for update the latest version manual.

www.datavideo.com/Audio+Mixing+and+Management/DAC-91

datavideo
www.datavideo.com

All the trademarks are the properties of their respective owners.
Datavideo Technologies Co., Ltd. All rights reserved 2018

Sep-08,2015 P/N: G082060747B1